
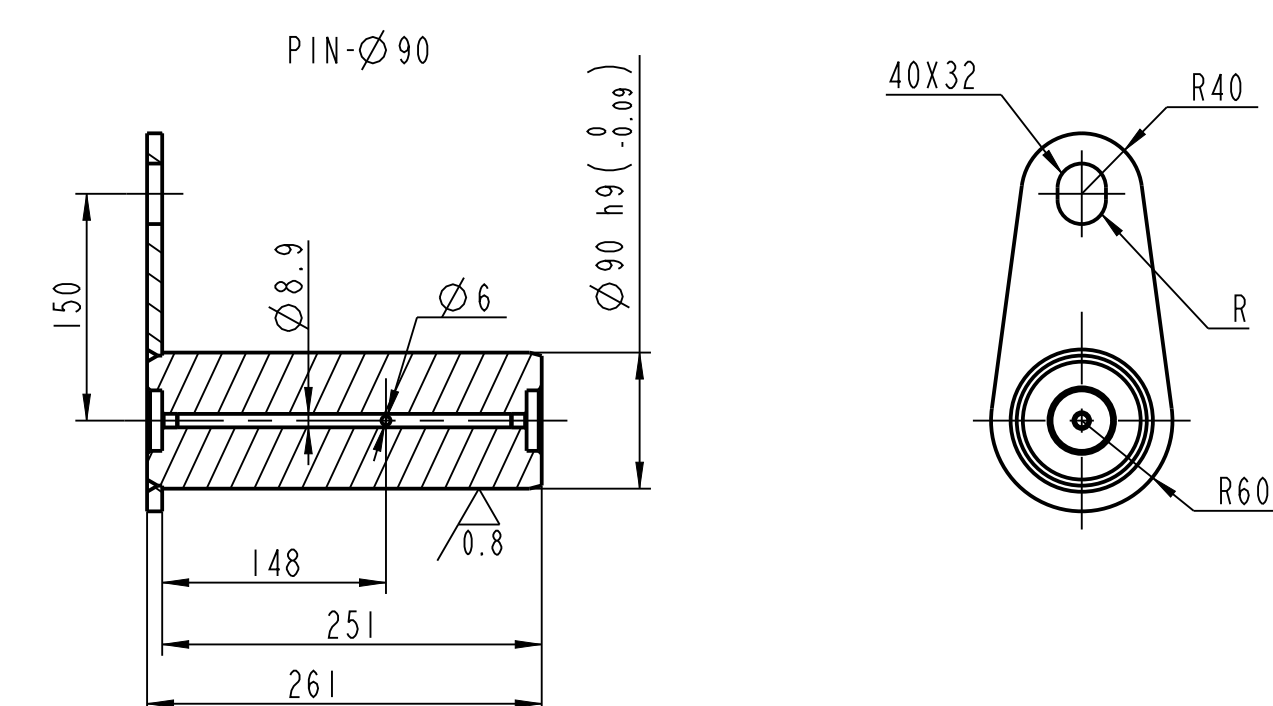
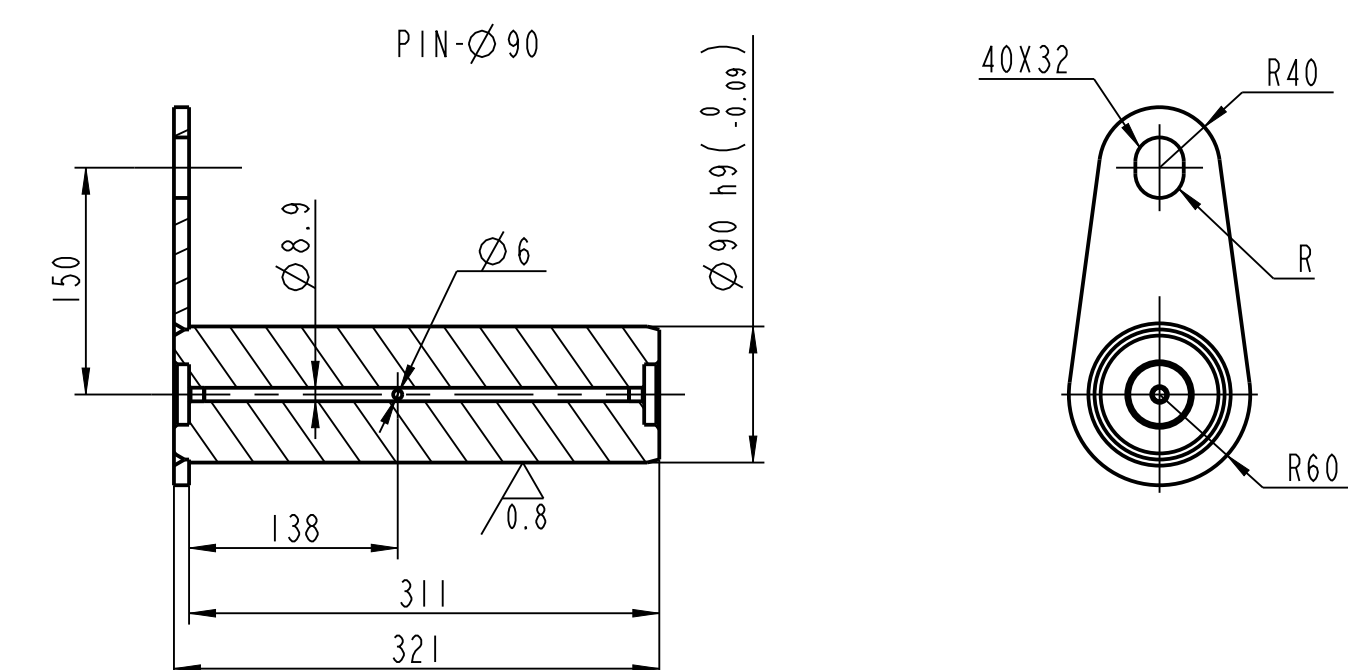
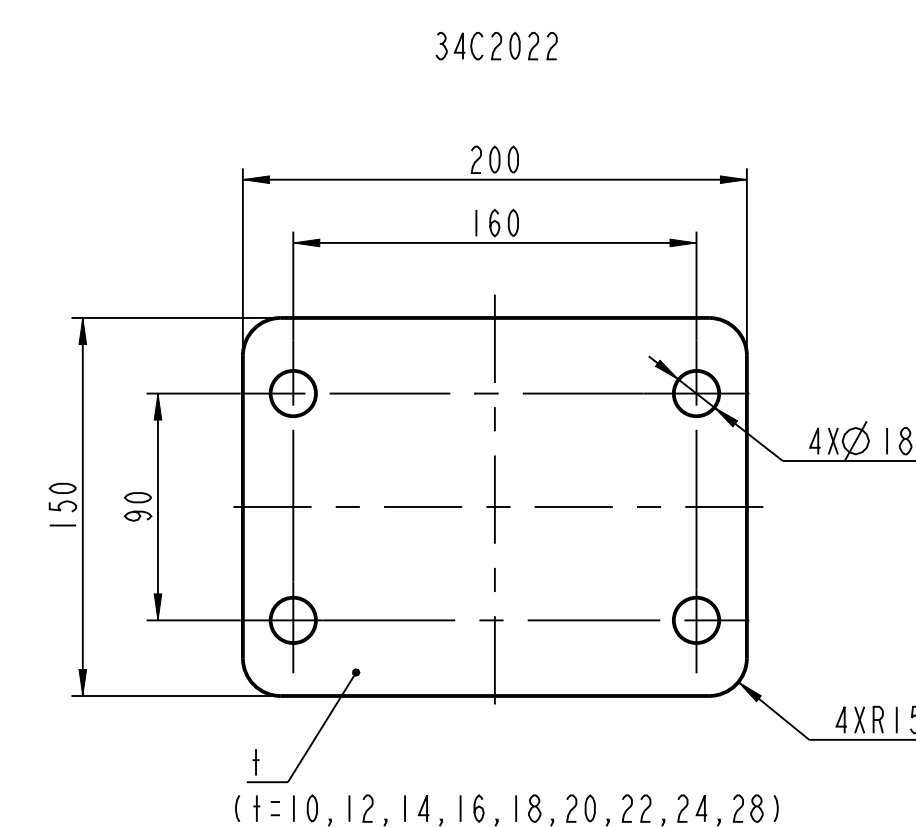
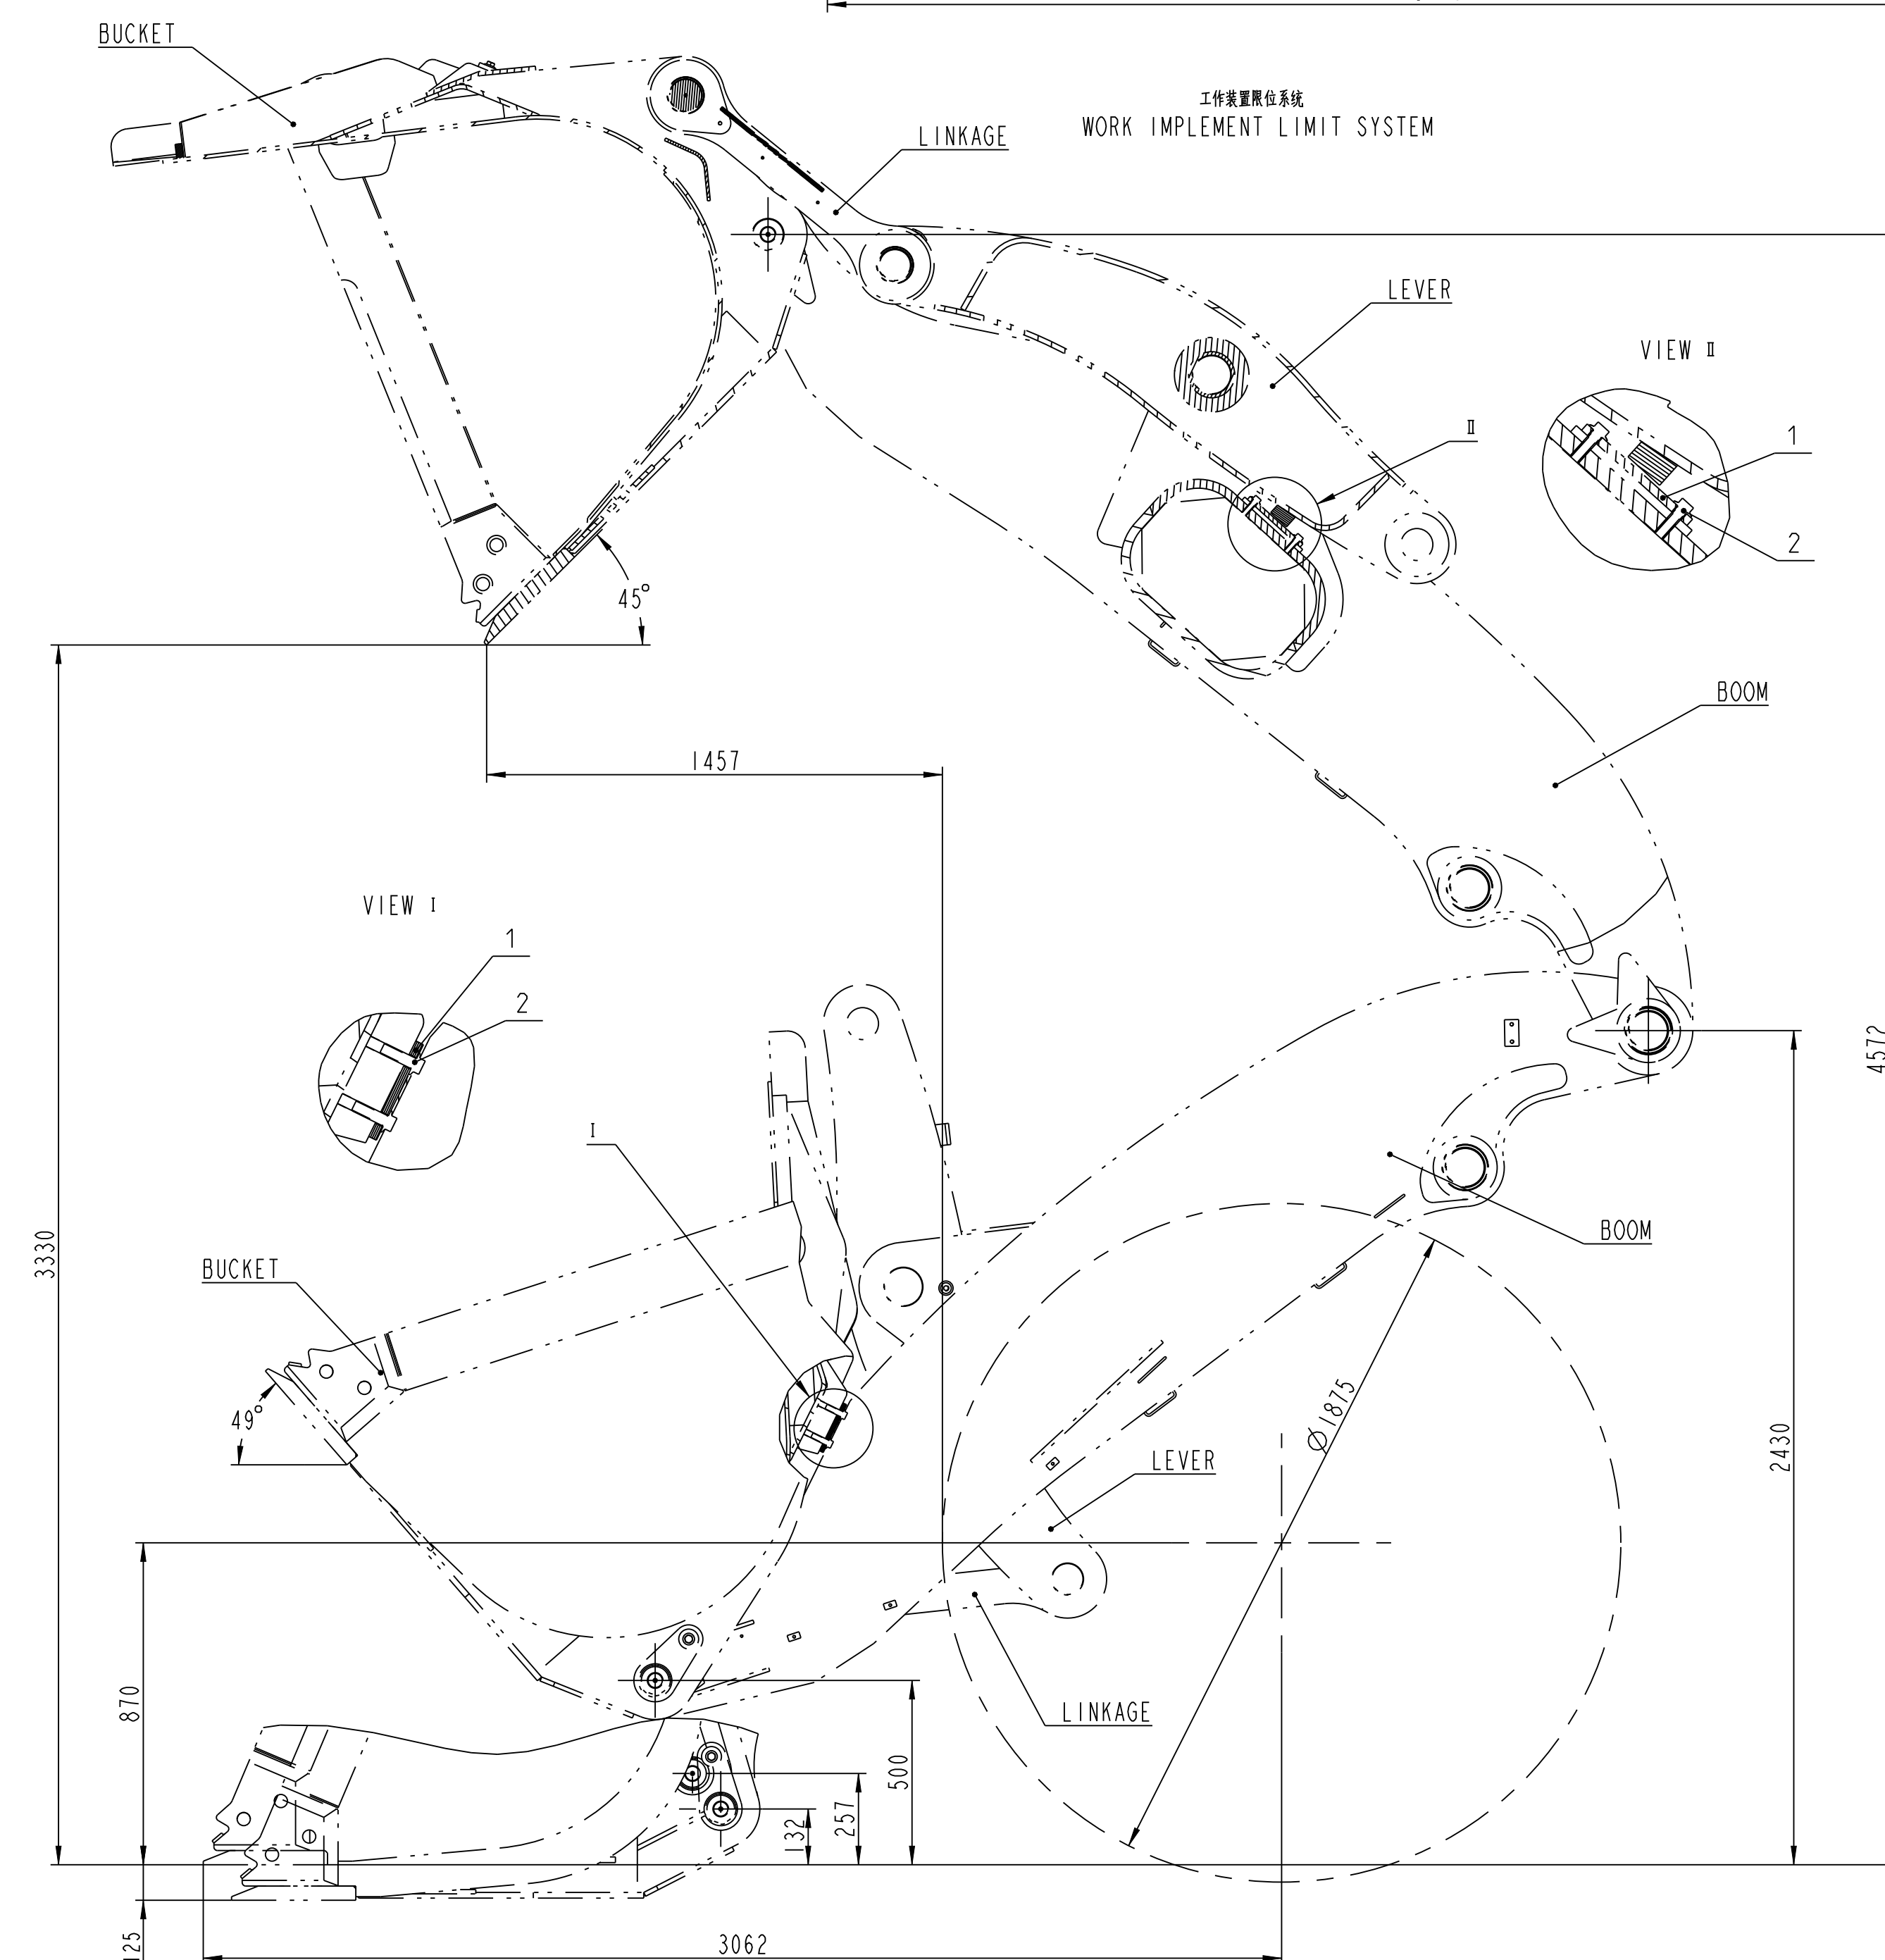
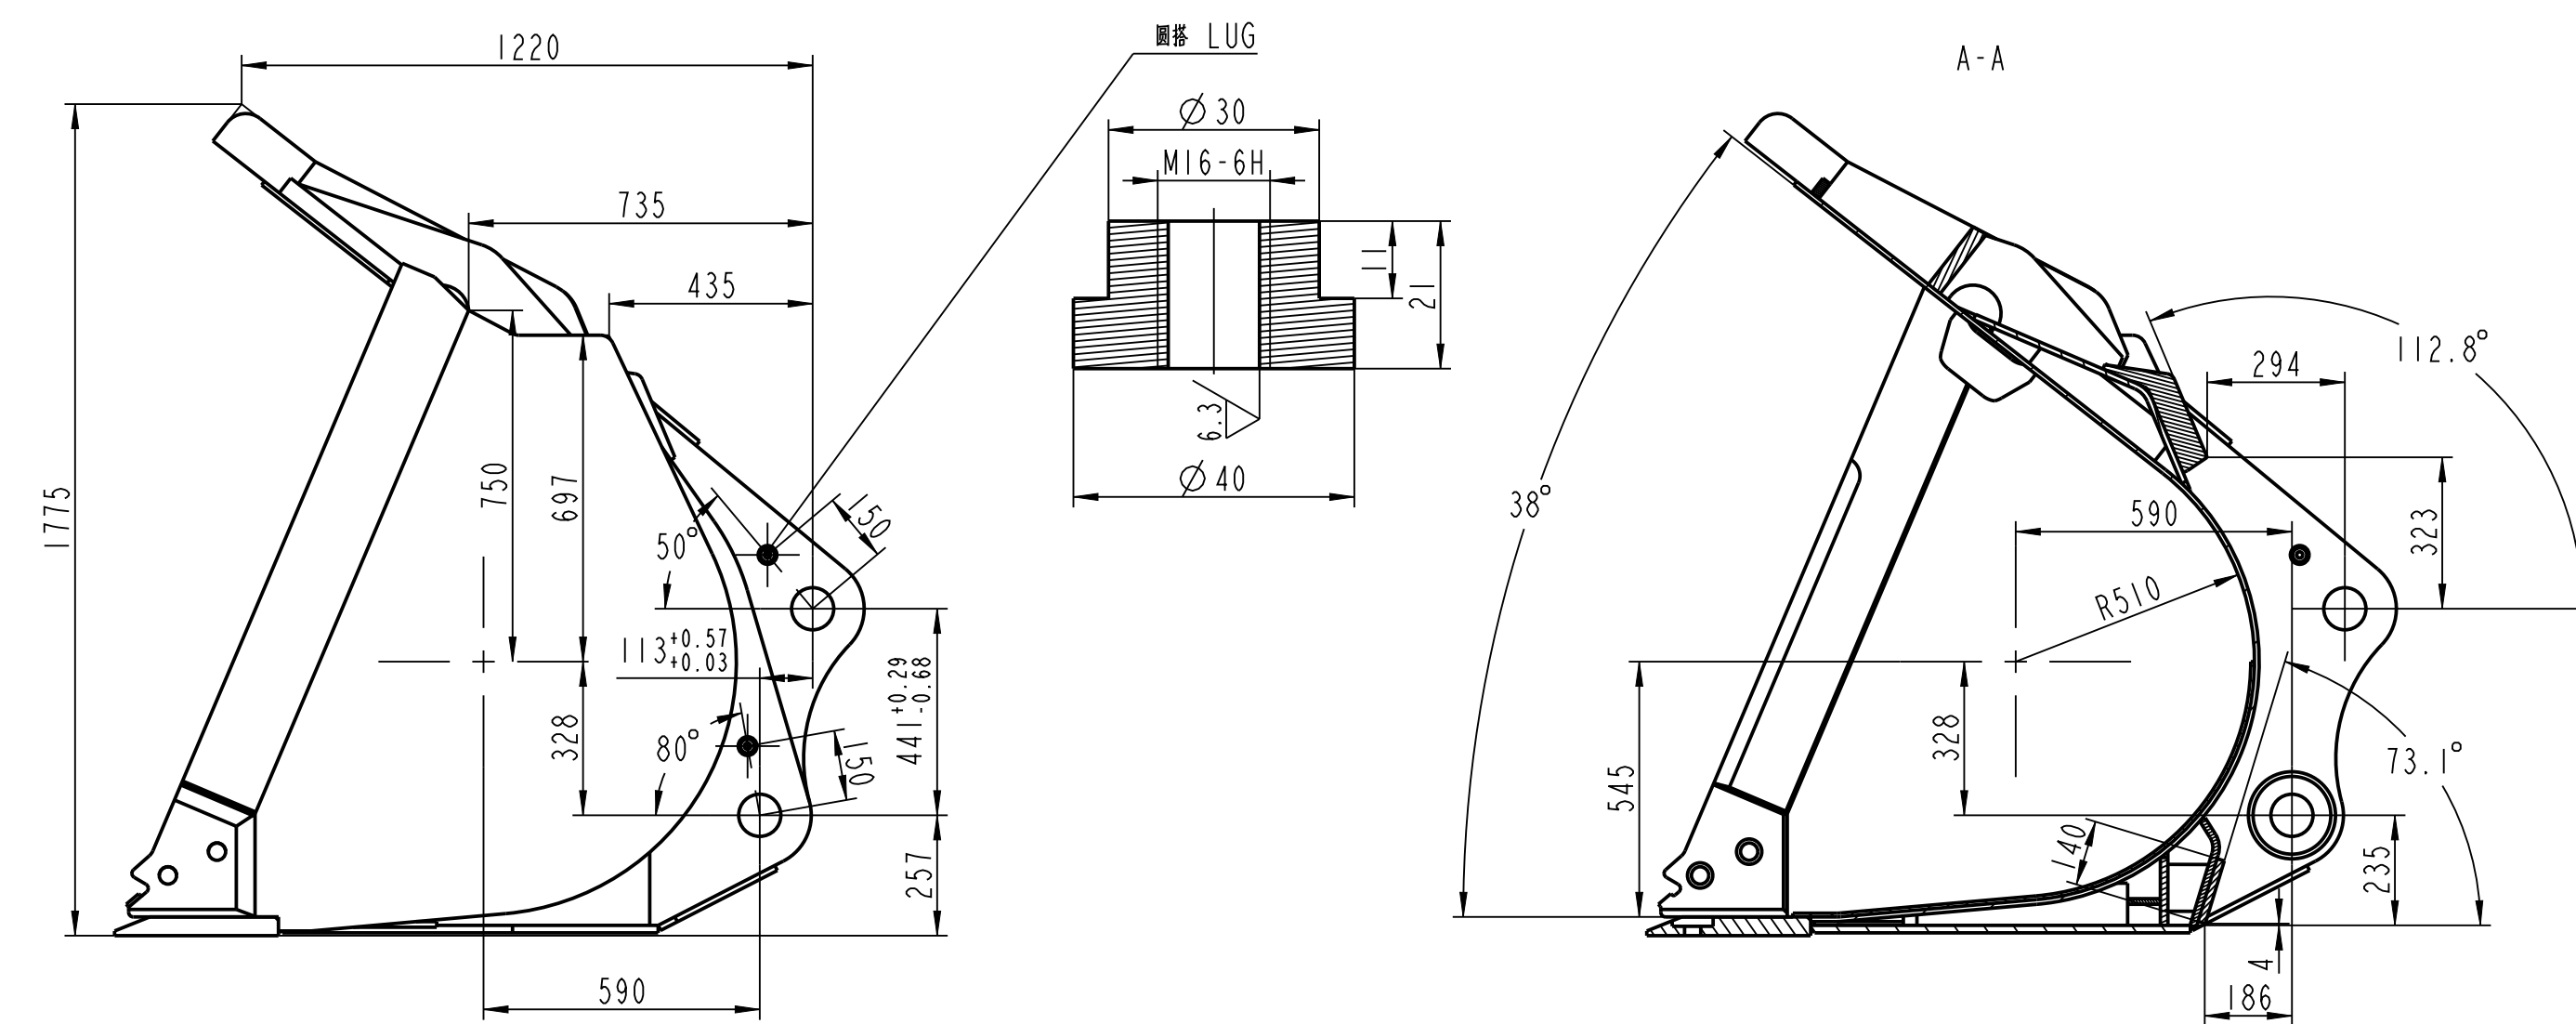


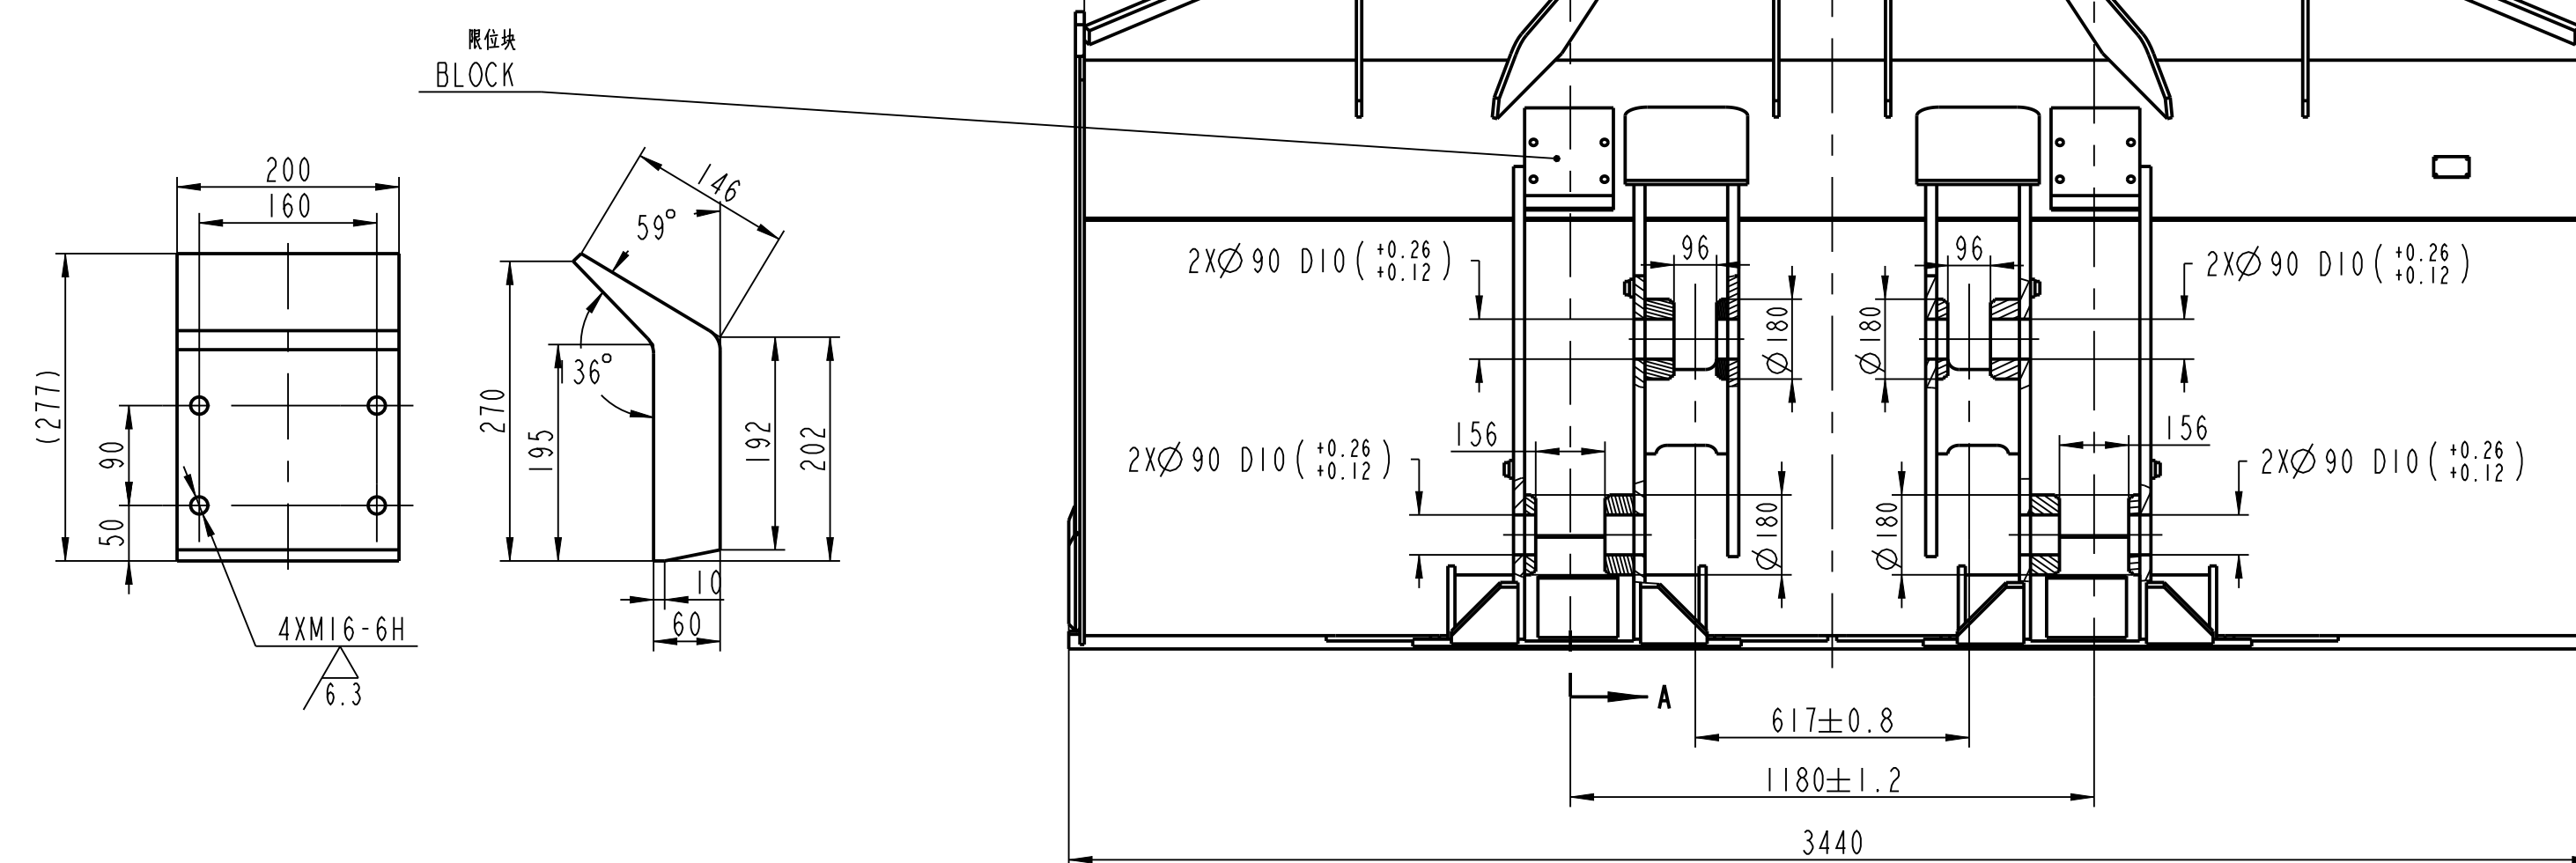

INSTALLATION INSTRUCTIONS:

1. WITH BOOM PIN 500 MM ABOVE THE GROUND, TILT BUCKET BACK 49 DEG. FROM THE HORIZONTAL PLANE INSTALL ITEMS 1 AND 2 AS SHOWN. SHIMS MAY BE REQUIRED TO CLOSE GAP TO PREVENT ATTACHMENT FROM STRIKING LEVER.

2. WITH BOOM PIN 4572 MM ABOVE THE GROUND AND WITH A 45 DEG. DISCHARGE ANGLE, INSTALL ITEMS 1 AND 2 AS SHOWN. SHIMS MAY BE REQUIRED TO CLOSE GAP TO PREVENT INTERFERENCE OF COMPONENTS.

[illegible]